




# Pro Carpet B


(Protective Carpet Binding)

**Pro Carpet B** Thermoglue Fabric Binding Tape to Protect  
and Decorate Carpet's Edges and Borders  
with Fuse System


**Binding with Support**

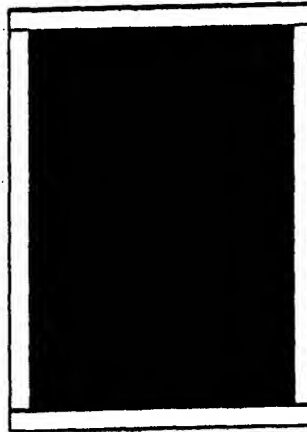

**Single Binding**

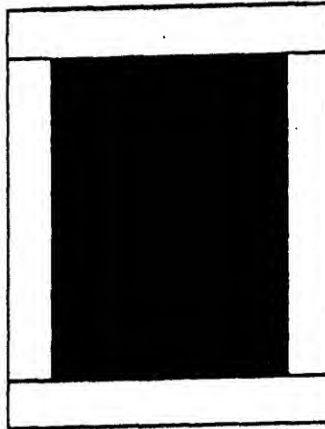

**Double Binding - Reinforced**

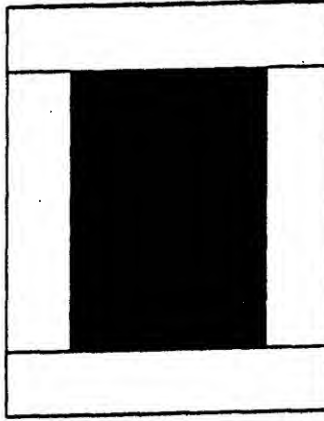

This new and unique Fuse System, Binding with Support, Single Binding and Double Binding we need to use an Iron to heat and stick the Thermoglue Fabric Binding Tape to the face and the back of the carpet. Therefore the binding tape will get stuck permanently to the edges and borders of the carpet. The binding tape is made of a fabric or any other similar material (Cotton, Polyester, Jute, etc.). It will be offered in a variety of different colors to tastefully match or accent virtually any kind of carpeting of any color or pattern. Besides protecting the carpet borders, single and double binding, will be a beautiful way to enhance the appearance of the carpet. They will also be different widths ( $\frac{1}{4}$ ,  $\frac{1}{2}$ , 1 inch or more) on top (Face) of the carpet, depending on the client's desire. This is a new type of protective attachment to fulfill the needs of a new way to finish and decorate carpet's borders. Prototype available.

**FIG. 1**

## Single Binding

3 inch wide fabric tape with a film of water proof special adhesive on one side (something like scotch tape) to be place length wise on the border of the carpet, so one half (1½ inch wide) of the binding tape will be stuck to the top (face) of the carpet and the other half (1½ inch wide) has to be folded and glued to the backside of the carpet by heat with an iron.

Pro Carpet B

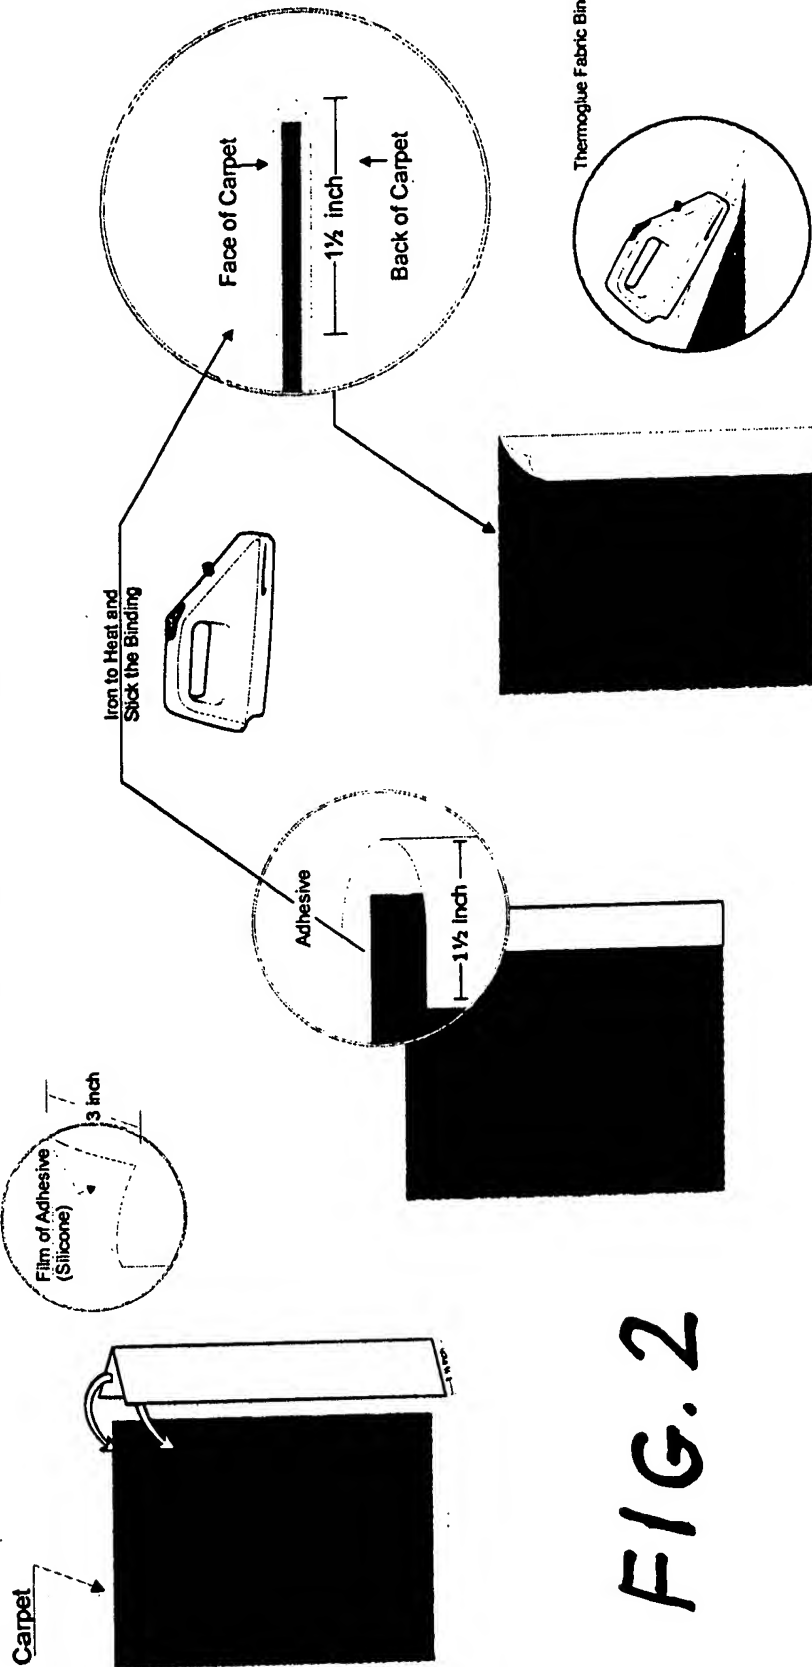


FIG. 2

## Binding with Support

A thin flexible paper wire is wrap along the edge of the fabric. 1½ inch wide fabric tape. ½ inch of the tape will cover a paper string making a cigarette that will join the edge of the carpet, the other 1 inch of the fabric tape that is left, will have a coat of water proof special adhesive (silicone) that will be melt with the help of a special iron in order to get stuck to the edge and back of the carpet preventing this way from tearing or fraying, therefore reducing the need to prematurely replace carpet.

### Pro Carpet B

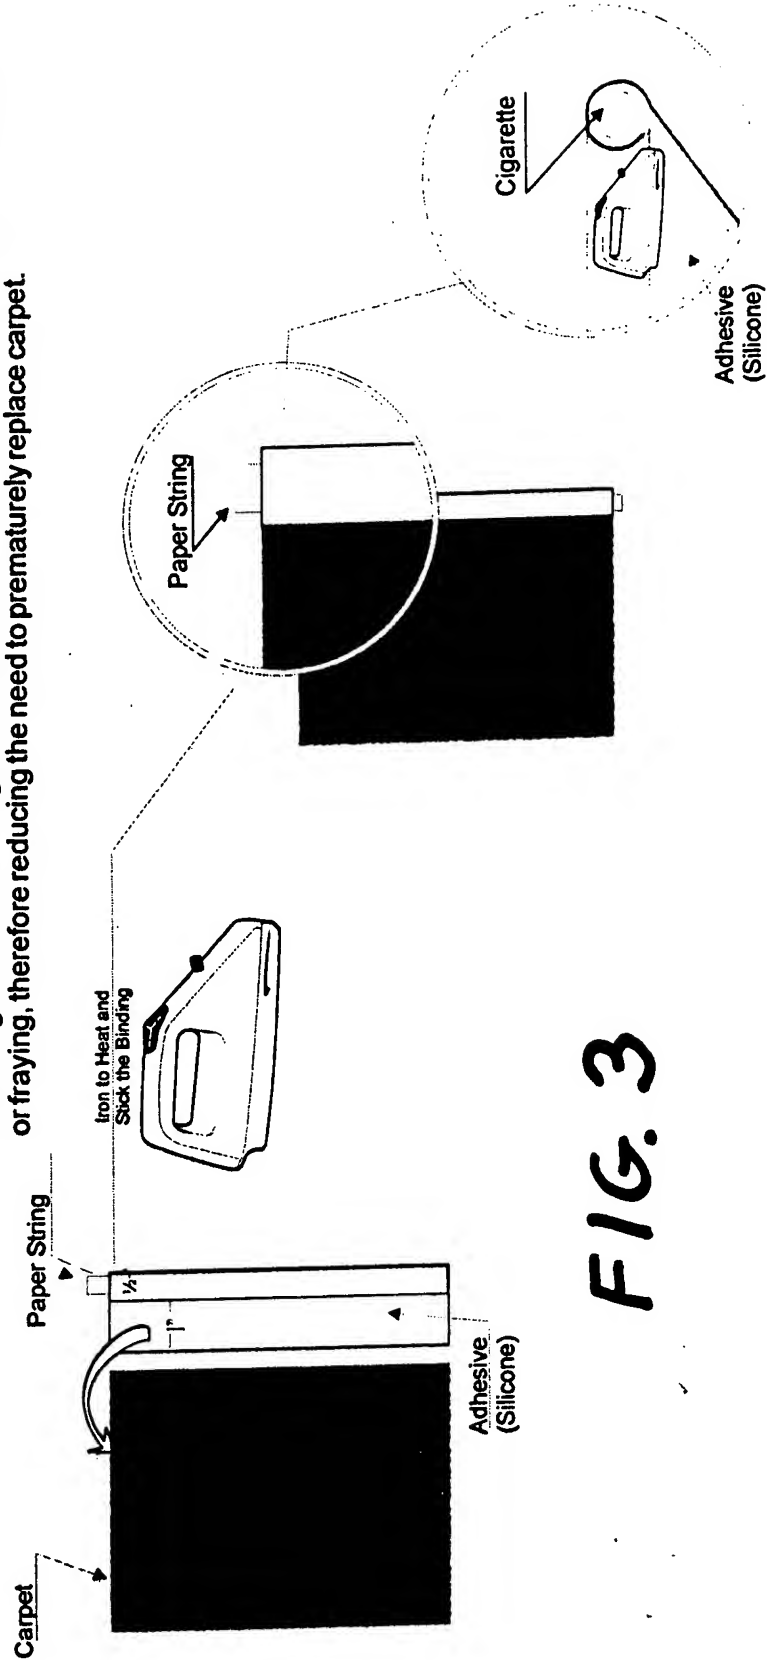



FIG. 3

## Double Binding (Reinforced)


3 inch wide fabric tape with a strip of 1 inch wide water proof special adhesive on the edge of one side that will be placed and glued lengthwise to the face of the carpet border. Another strip (1 inch wide) of the tape to be folded over the first one already stuck to the carpet's face and the other remaining 1/3 (1 inch wide) of the binding tape of course has to be folded lengthwise and glued to the back side of the carpet by heat with an iron. Therefore it would give even more consistency to the border of the carpet.



**Pro Carpet B**


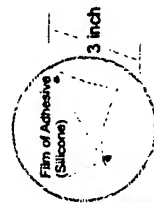


Carpet

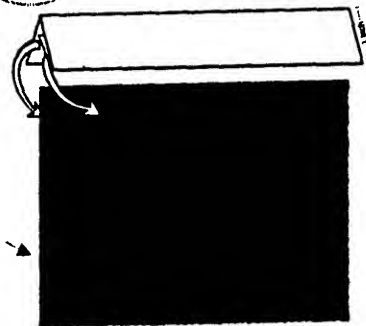


**FIG. 4**

Iron to Heat and  
Stick the Binding

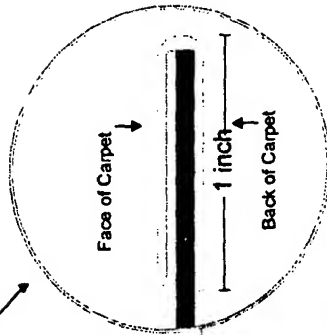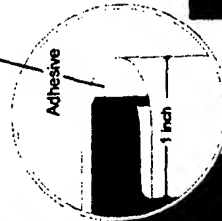

Folded twice on Top  
(Face) of the Carpet

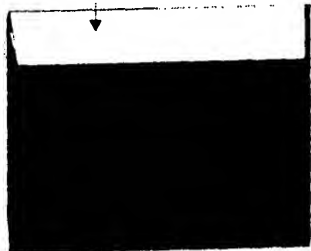

Thermoglu  
Fabric Binding

